



MOUNTING SUGGESTIONS

Triumph Speedmaster & America 2002-2008 - Solo and Passenger Seat

Hardware:

Solo:

Chrome rear mounting bracket
10-32x5/8" screw x2
Black retaining clip x2
8mm x 15mm chrome buttonhead screw
White nylon washer

Passenger:

Stock rear fender screw
1/4"-20x3/4" Phillips screw x2

Tools needed:

3mm Allen wrench
5mm Allen wrench
8mm wrench
Phillips screwdriver

Removal of stock seat:

1. Remove the rear fender screw with a 5mm Allen wrench and set aside. This screw will be used to mount the Mustang passenger seat.
2. Locate the pull ring on the left side of the seat and pull it to release the seat from the fender bracket.



3. Lift the seat up and back to remove from motorcycle.



4. Remove the fender bracket (including nut, bolts and washers) from the fender using a 3mm Allen wrench and an 8mm wrench. Insert the black retaining clips into the two outermost holes in the fender.

Installation of Mustang seat:

Solo only:

1. Attach the chrome bracket to the rear of the solo using the provided 10-32 x 5/8" Phillips screws. (See photo on page 1.) Tighten securely, but do not overtighten.
2. Insert nose tab into the frame mount under the tank.
3. Position the white nylon washer between the rear solo bracket and the center fender hole and attach with the provided 8mm x 15mm screw. Tighten securely with a 5mm Allen wrench.



Solo and passenger seat:

1. Install the 8mm x 15mm screw provided with the solo into the open fender hole to prevent splash-through from the rear tire.



2. Attach the front brackets on the rear seat to the rear of the solo with the provided 1/4"-20 x 3/4" Phillips screws. Tighten securely, but do not overtighten. **Do not use the chrome solo bracket when installing with the passenger seat.**

3. Insert nose tab into the frame mount under the tank.
4. Position the white nylon washer between the rear passenger bracket and the rear fender hole and attach with the stock rear fender screw. Tighten securely with a 5mm Allen wrench


Enjoy the comfort and custom look of your new Mustang seat!



These steps are guidelines to help you install your new Mustang product. If you need further assistance, please call us at 800-243-1392 or 413-668-1100, Monday through Friday 8:30 - 5:00 Eastern or send an e-mail to tech@mustangseats.com or visit our website at www.mustangseats.com.

For care and maintenance of our seats, please go to our website under "Support".

Refers to part numbers: 76010, 76011, 76015, 76016, 76017, 76018, 79000, 79001, 79002, 79003, 79004, 79005

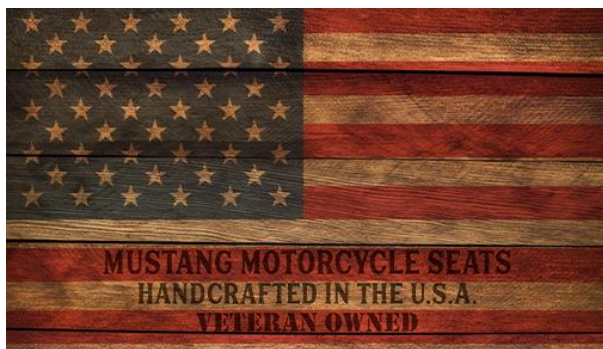

Products made by Mustang Motorcycle Products, LLC are warranted for one year against defects in material and workmanship. Mustang must first be notified of any apparent defect. A return authorization will be issued. Carefully pack the product and return prepaid. Upon receipt, Mustang will make a fair, prompt decision regarding repair or replacement.

Incidental and consequential damages arising from or in connection with the installation or use of a Mustang product are not covered by this warranty. An original purchase receipt must be provided to obtain a warranty repair or replacement.